


Telescoping Ladder  
Installation on PK 4400

Place ladder on deck and make sure it is positioned so that it has clearance to swing down into the water.

Once positioned correctly, using a 1/4" drill bit, drill one hole and put a bolt in it so that the ladder will not move.

Next make sure the ladder is pushed up tight to the carpet still and drill a hole on the other side of the ladder, once drilled insert bolt. Drill last two holes and insert bolts.

From the bottom insert washers and nuts, tighten them all down using a 7/16 wrench on bottom and phillips #3 bit on top.

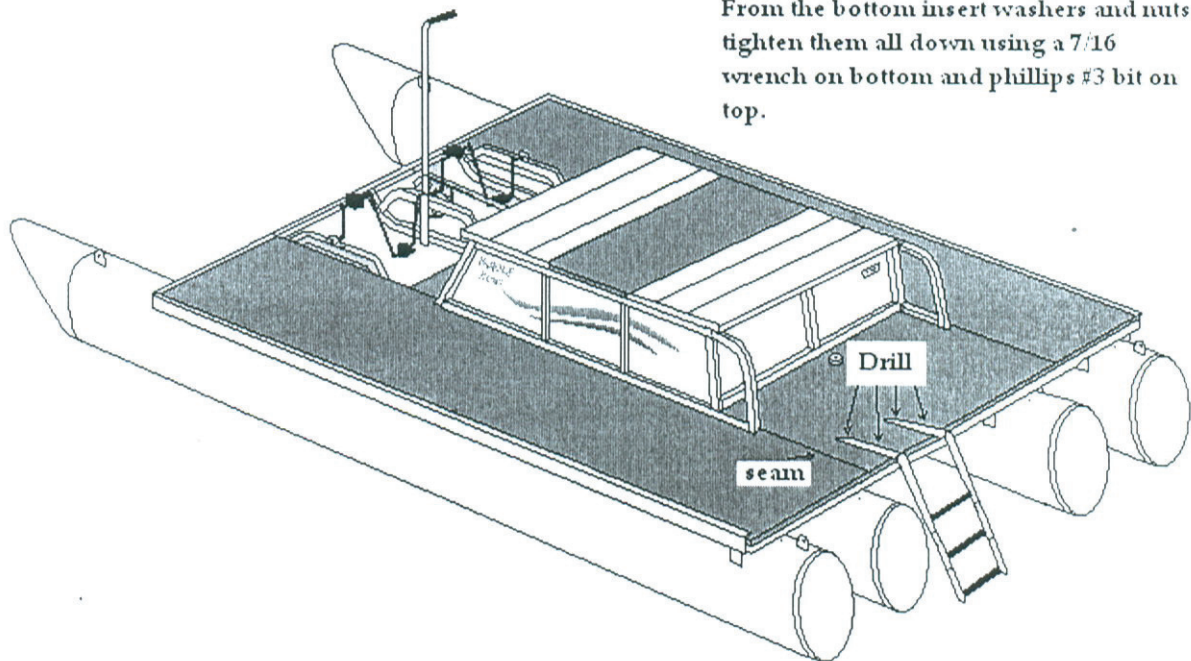

Telescoping ladder should be mounted 7" from the left side of the carpet seam in back as shown.