



Bimini Assembly Instructions

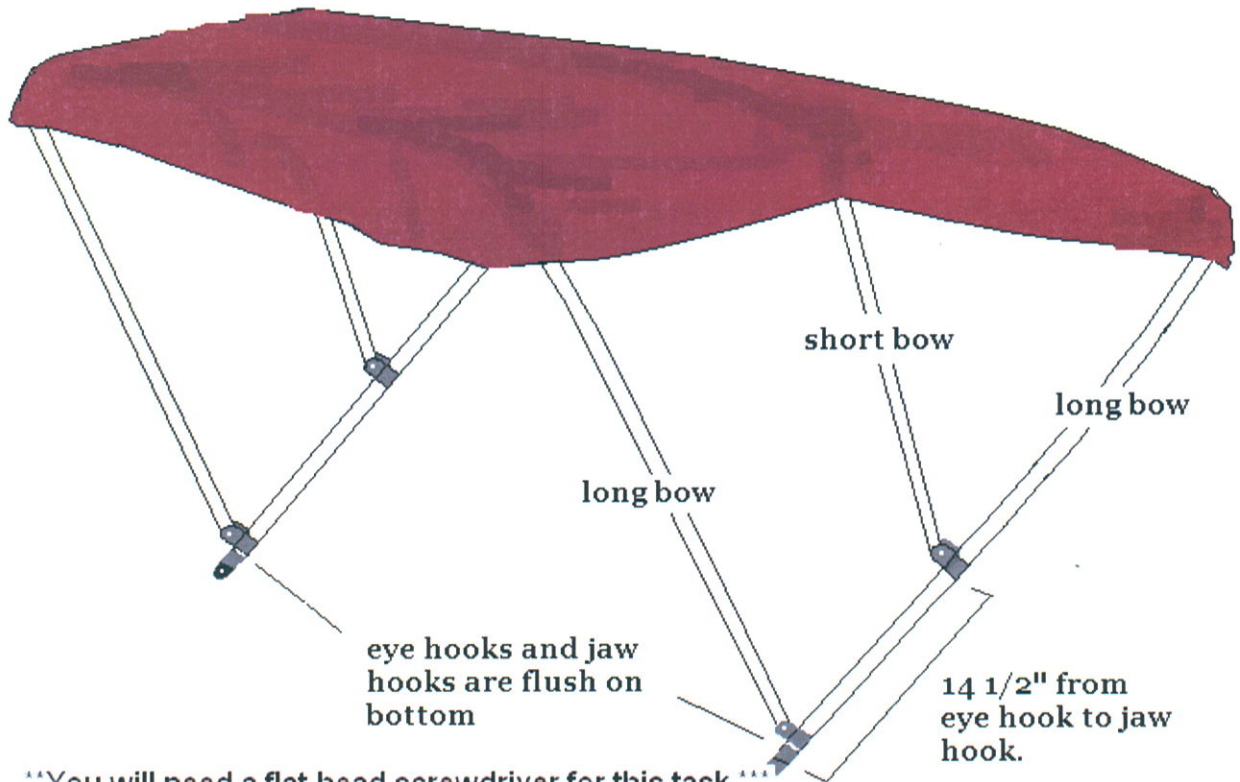

“You will need a flat-head screwdriver for this task.”
If the bimini top was shipped to you in a box, first you can unfold the bimini top and set it on the ground with its “legs” in the air. Working on one side first, you will need to put the front long bow back into the eye hook. Then slide the short bow to the dimension shown (14.5”). There may already be a mark on the bow where it should be place. You will then need to tighten the two (2) flathead set screws back into the eye hooks. Be careful not to tighten the screw down too tightly or it may strip out (screw guns or cordless screwdrivers are not recommended). Last, put the eye hook onto the long bows and tighten set screw. Repeat this procedure on the other side.

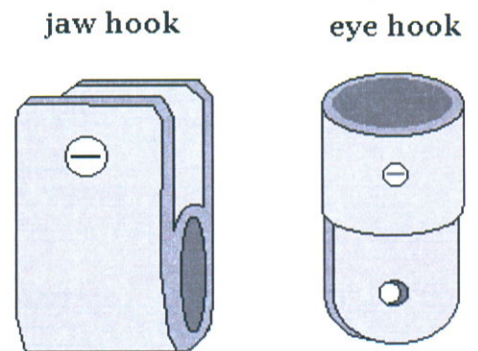

Refer to the Bimini Mounting instructions provided to install the bimini onto the boat. Instructions are also on-line at www.paddleking.com. Please feel free to contact us if you have any questions regarding this installation.