

# Half Back Instructions

1. Remove old lid (no picture)



2. Install spacer at back of box (no picture)




3. Place spacer on top of plastic



4. Place half back on top of spacer



5. There is 5¼" between plastic and half back

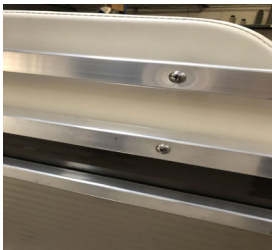

6. There is 22" in between the side to side screws



7. Screw in bottom part of half back first



8. There are two spacers to use when screwing in the top part of half back




9. Place bottom of the seat up against the plastic piece, and trace a line all the way around




10. Measure the hinges 7" from the side mark on underside



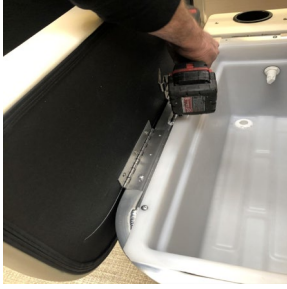

11. Screw in the hinges on the base

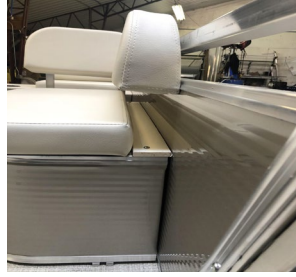

12. This is how the seat should line up

## Optional Side Lounge Installation




1. The side lounge would be shipped all in one piece (optional)



2. Line the side lounge up against the metal bars (optional)



3. Place spacers under the side lounge, them screw them down (optional)

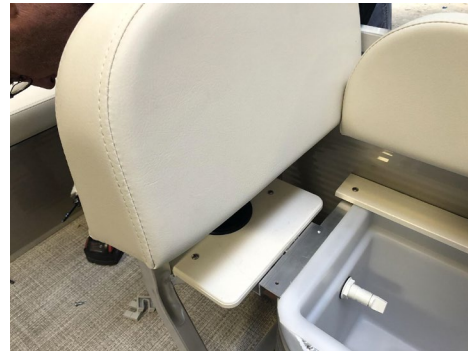

4. Drill two screws into the silver plate



5. This should be the finished product