



Installation of the Canopy Package

You will need an electric or cordless screwdriver and a Phillips #2 bit. No pre-drilling is required. You should have received 4 mounting brackets, 2 black eye hooks, and at least 12 self-tapping screws. During the installation process, it is important not to over-tighten screws.

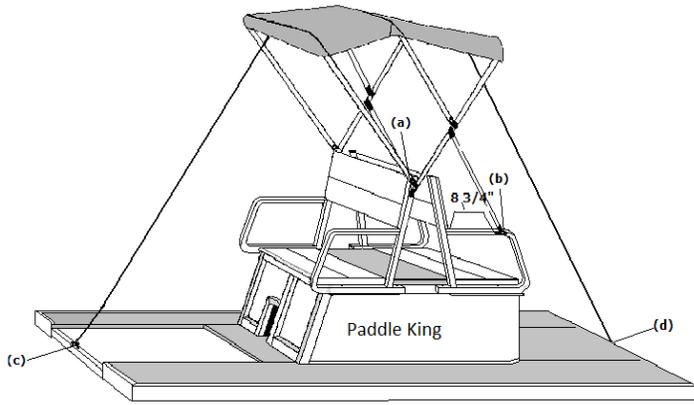

PK4400

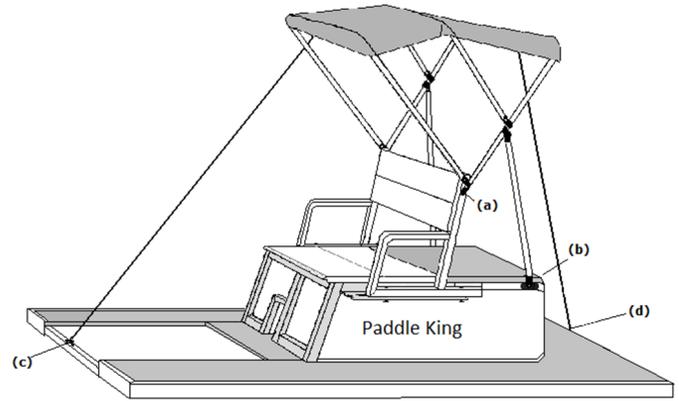

PK3000

1. Measure 1 $\frac{3}{4}$ " down from the top side edge of the seatback and mark the position. Position the mounting bracket on the edge of the seat back (a) so that the center is directly over the mark and install the screws into the side of the seatback while keeping the bracket in place. Repeat on opposite side of seat back.
2. **FOR PK4400:** Moving to the lower bracket (b), position the bracket horizontally on the edge of the arm rest 8 $\frac{3}{4}$ " from the inside edge. Install the screws into the armrest, keeping the bracket in place.
FOR PK3000: Moving to the lower bracket (b), position the bracket right below the edge of the rear surface board so that the thumb screw is lined up directly below the back edge of the rear surface board. Install the screws into the boat, keeping the bracket in place
3. Remove all 4 of the thumb screws from the mounting brackets.
4. Take the canopy and position it so the eye ends are near the brackets and insert the thumb screws through the eye ends and back into the brackets.
5. Tighten thumbscrews but don't over tighten.
6. Do the same for the support brackets.
7. To install the eye hooks, place one eye hook (c) in the front in the center and install the screws while keeping the eye hook in place. Install rear eye hook (d) to aluminum cross member located under rear deck.

To fold the canopy back into the closed position for storage in the boot, slide the front adjuster on the black nylon strap so it loosens the tension. Do the same for the rear strap. Then unhook the front and back hooks. Fold the canopy back so the canvas folds downward. The black strap can be wound around the canopy. Put the boot over the folded canopy and zip.

The canopy should be cleaned once a year and treated with a good marine canvas UV inhibitor spray such as 303® brand products.

For winter storage, the canopy should be taken off and stored inside (mice, moths and other insects love to nest in canvas, so the shed is not a good place to store canopy).

When trailering the boat, the canopy should be taken off.

