

Paddle Boat Table Assembly Installation for the PK3000 and PK4400

Tools needed:


#2 Phillips head bit, power drill with a 5/16" drill bit and a 1/2" wrench

Hardware included:

(12) #10x3/4" self-drilling screws (4) 4" hex head bolts, (8) 5/16" washers, (4) 5/16" wing nuts.

Note: Do not over tighten screws.

1. Using a Phillips head bit and power drill, install the 3/4" screws in numeric order (all attachment points are pre-drilled and pre-numbered).

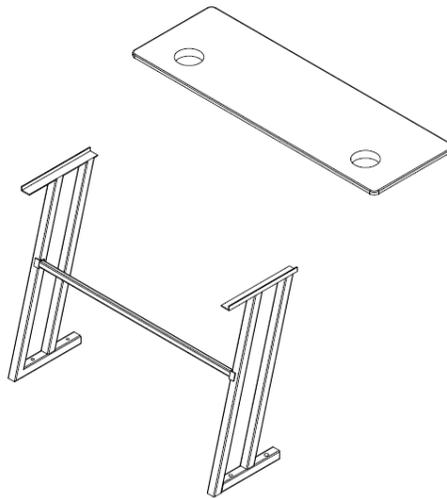

2. Once the table is assembled, place the table on the paddle boat by lining up the edge of the front table legs with the front edge of the boat (see picture below).
3. Locate the 4 predrilled mounting holes. Mark the paddle boat deck and remove the table. Using a 5/16" drill bit, drill all 4 holes through the deck and frame of the boat.
4. Set table back in place and install the 4" bolts and tighten down with 1/2" wrench.

Warning: Remove entire table assembly from boat if transporting boat on trailer!

